



ENIP Delete Panel

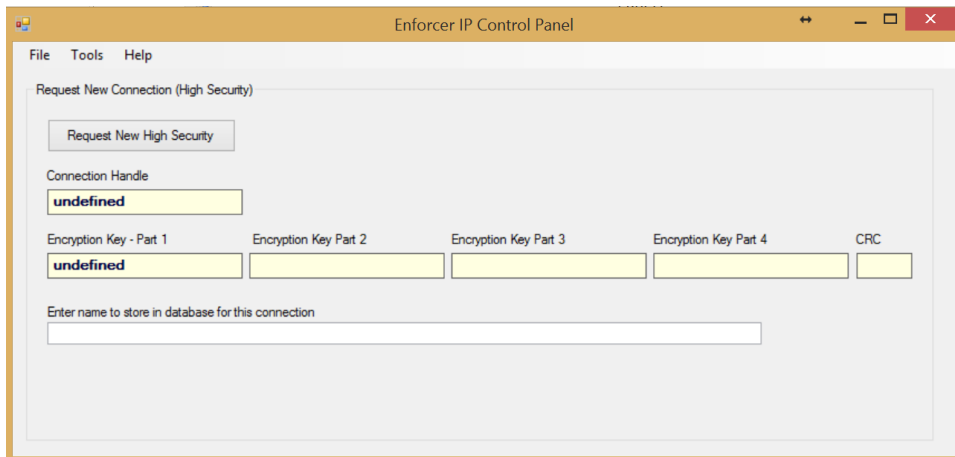


Click on File/ view all panels




Find and note the connection Id and name of the panel you wish to delete

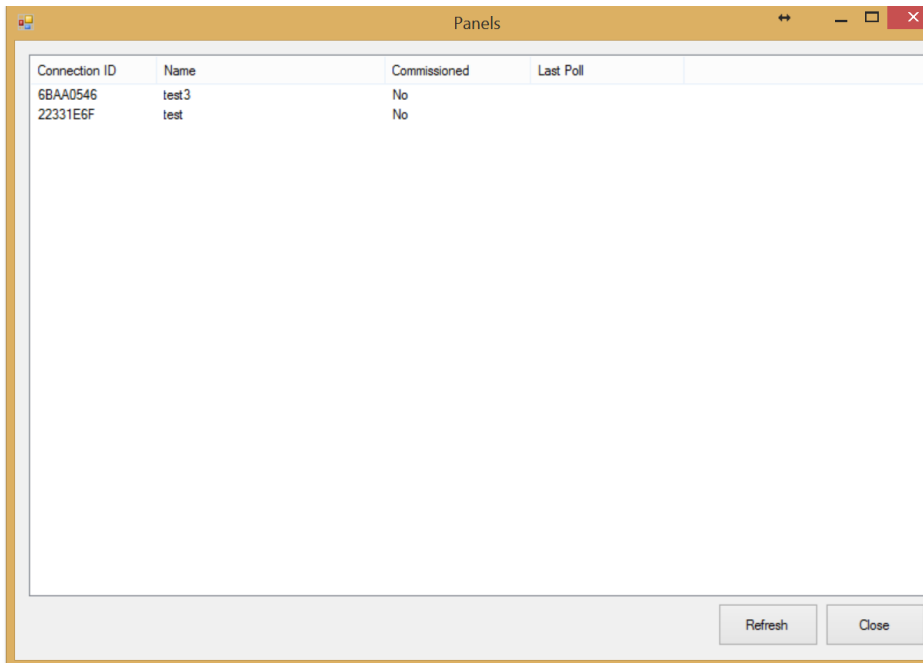

Click on File/ view a panel then type the panel name and show

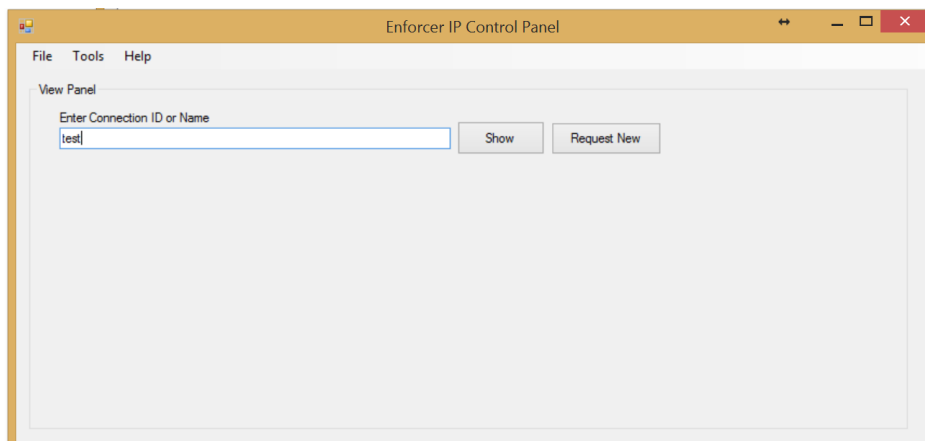

Select the delete tab then type in the connection Id in the blank box then click delete

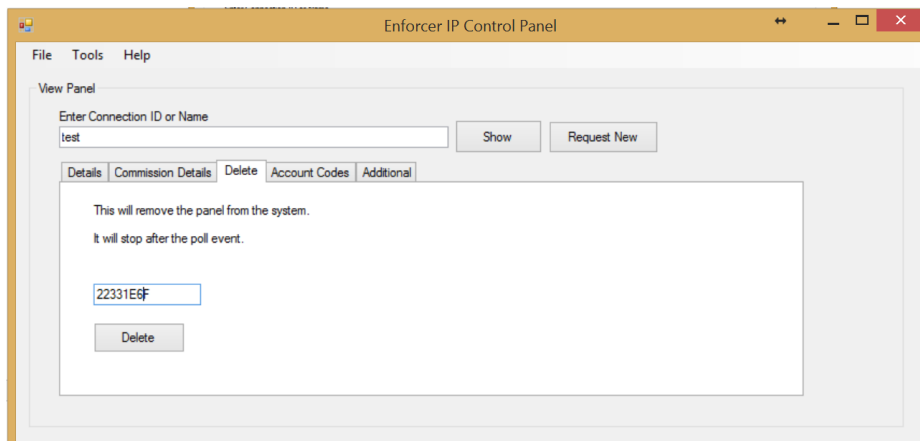

Click delete and confirm

