



Enforcer - Factory Default Process

In the Engineering menu navigate to

FACTORY DEFAULT?

Default Panel NVM (Non Volatile Memory)

Default Code []



Enter Factory Default Code 2000

Please Wait.....

Clear Wrls Data ?

Clear Codes?

Clear Logs?

Press  after each question to Fully Clean Start Panel or press  to move to the next prompt.

Don't forget exiting engineer menu is required to save the programming data to the panel NVM

Exit Engineer mode by pressing the  key from any menu option in UPPER CASE